


Wrap 0.1 mm brass wire around a piece of plywood

Solder at the joints

Solder at the opposite side as well.

$\frac{1}{2}$ Distance between poles

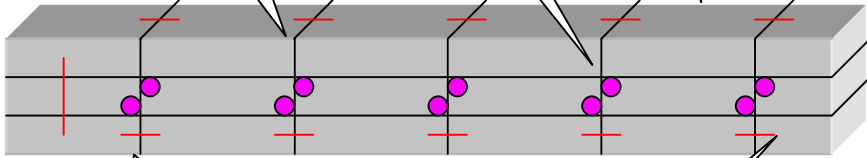

Make notches in the wood at the right distances to keep wire from moving.

Cut at the red lines

Result ready to glue on to the deck

